Customizing Settings Using the MID

Four groups of settings can be programmed using the MID: Meter Setup, Position Setup, Lighting Setup, and Door Setup. See your Owner's Manual for a complete list of programmable settings.

Modifying the Auto Door Unlock Setting

As the default setting, only the driver's door unlocks when you shift to Park (or turn the ignition off for manual transmission vehicles). Follow the steps below to change the setting. Make sure you are using the key you want to change settings for (Driver 1 or Driver 2).

Press and hold either INFO button (▲/▼) to enter customization mode, then press SEL/RESET to enter the menu.

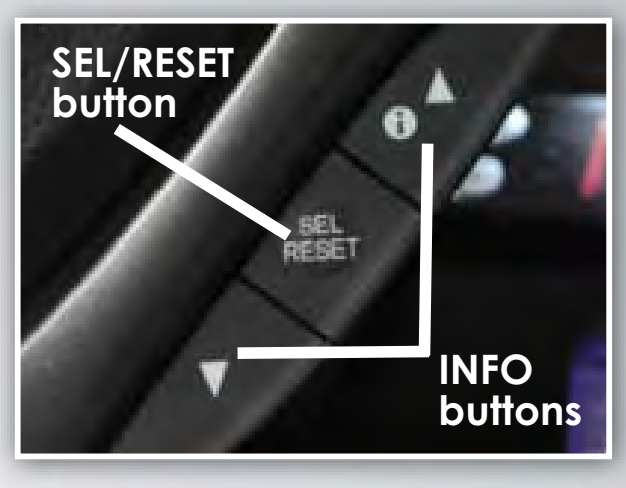

1. Select CHG SETTING.

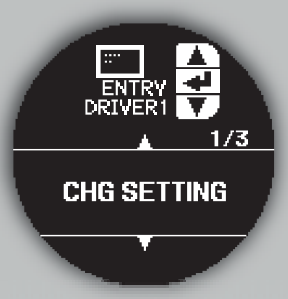

2. Select DOOR SETUP.

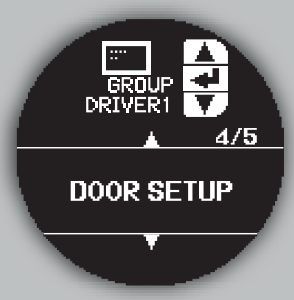

3. Select AUTO DOOR UNLOCK.

4. Select one of the options.

5. Once the setting has been saved, select EXIT.

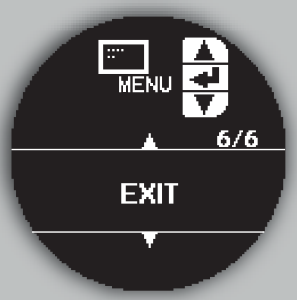

Note: The driver's and front passenger's doors can be opened by pulling the inner front door handle, regardless of the settings. Changing the setting to "All Doors" is useful for rear passengers.

DRIVING POSITION MEMORY SYSTEM (DPMS)

Store driver's seat positions into memory for each corresponding remote transmitter (1 or 2).

Programming the DPMS

1. Turn the ignition switch to ON (II). Shift into Park (P) or apply the parking brake for manual transmission vehicles.

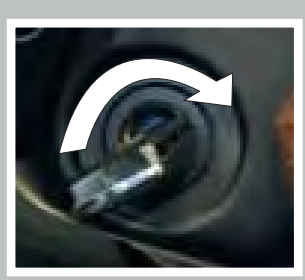

2. Adjust the seat to your preferred position.

3. Press SET. You will hear a beep.

4. Within 5 seconds, press the memory button corresponding to the remote (1 or 2) you are using. You will hear two beeps.

Note: Once set, stored positions can be recalled by pressing one of the memory buttons (1 or 2) on the door.