


Climate Control System

Set your preferred interior temperature by selecting the proper mix of heated or cooled air and fan speed. Use the On-Demand Multi-Use Display (ODMD) or buttons to operate the system.

On-Demand Multi-Use Display (ODMD)
 When you select a climate control icon, a new screen appears where you can make adjustments or change settings.

Airflow control mode
Driver's side temperature
Passenger's side temperature
Shortcuts (Climate tab): Store or select two climate control settings.
AC: Turn the air conditioning on or off.
SYNC: Set the passenger's side temperature to the same as the driver's side.
Fan speed
Recirculation/fresh air mode

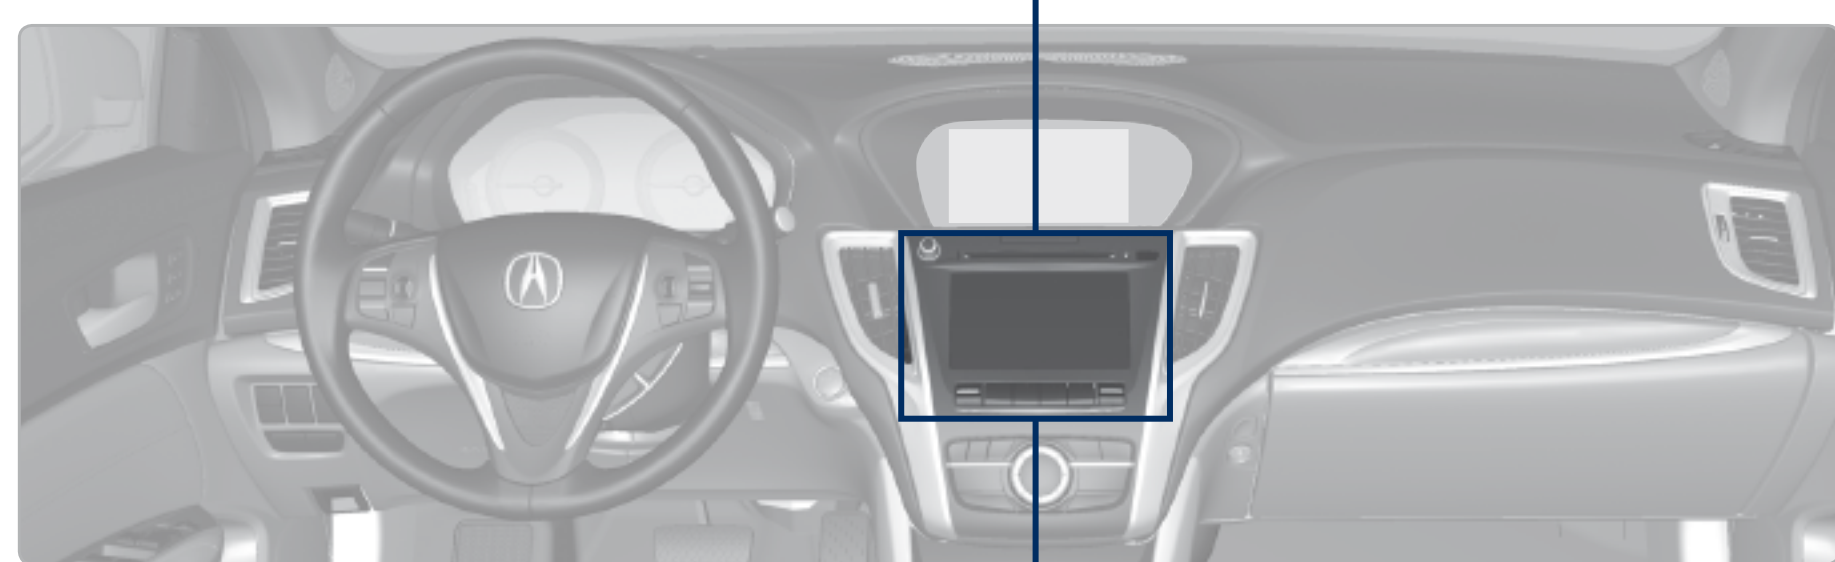

Climate control buttons

Driver's side temperature switch
Passenger's side temperature switch
AUTO button: Press, then adjust the temperature to your preferred setting.
ON/OFF button
Windshield defroster button
Rear window defogger/heated mirror button

Climate control operation is affected during auto idle stop operation*.

Seat Heaters and Ventilation*

Quickly warm or cool the seats when the vehicle is on.

Front Seat Heaters or Ventilation*

Use the On-Demand Multi-Use Display (ODMD) to operate the front seat heaters or ventilation.



ODMD screen

Select to enter the seat heating screen.

Close the menu.
-: Decrease heating or cooling levels.
OFF: Turn the seat heaters off.
HEAT
COOL
OFF
AUTO
AUTO*: The system selects the best setting based on ambient temperature.
Select LO, MID, or HI level.
+: Increase heating or cooling levels.


When the vehicle is turned off, the heating or cooling setting returns to off at the next vehicle start. If AUTO is selected, the setting remains in AUTO.

Rear Seat Heaters*

Canadian models

Use the buttons on the rear of the center console to operate the rear outer seat heaters.

Press either seat heater button to toggle through the HI, MID, LO, or OFF settings. The appropriate indicator appears for each setting.

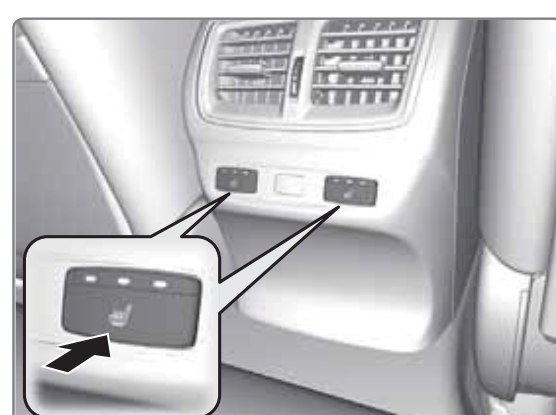

⚠️ WARNING

Heat-induced burns are possible when using seat heaters. Persons with a diminished ability to sense temperature (e.g., persons with diabetes, lower-limb nerve damage, or paralysis) or with sensitive skin should not use the seat heaters.

*if equipped